
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS FOR EC 130 B4 HELICOPTER EQUIPPED WITH LH AND RH SIDE COWLING MAINTENANCE STEPS

This document must be utilized in conjunction with the basic Maintenance Manual for the EC130 B4 helicopter when the LH and RH side cowling Maintenance steps are installed in accordance with Drawing No. 130–200094 and 130–200104.



THE INFORMATION CONTAINED IN THIS DOCUMENT SHALL BE TREATED AS THE PROPERTY OF EUROCOPTER CANADA LIMITED (ECL). THE RECIPIENT OF THIS DOCUMENT SHALL NOT DISCLOSE ANY INFORMATION CONTAINED HEREIN TO THIRD PARTIES WITHOUT THE WRITTEN PERMISSION OF ECL, AND SHALL NOT USE OR REPRODUCE THIS DOCUMENT IN WHOLE OR IN PART FOR ANY PURPOSE OTHER THAN ITS ORIGINALLY INTENDED PURPOSE, OR TO EVALUATE ITS CONTENTS.

	NAME AND SIGNATURE	DATE	COMPANY DEPARTMENT
PREPARED BY:	H. Paulisch	6 November 2002	ECL ENGINEERING
PREPARED BY:			ECL ENGINEERING
CHECKED BY:	C. Timmins	12th November 200	ECL ENGINEERING
CHECKED BY:	F.GRAY T. Dmy	Nov 6/2002	ECL ENGINEERING
RELEASED BY:	R. Manson	12 Novio2	ECL ENGINEERING
ACCEPTED BY TC / FAA	(Sac TCC+ Storms)		PAI

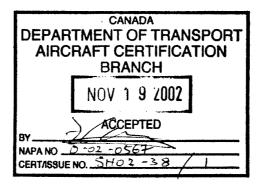

LIST OF REVISIONS

REVISION	AFFECTED PAGES	DESCRIPTION AND REASON	PREPARED (NAME AND DATE)	CHECKED (NAME AND DATE)	RELEASED (NAME AND DATE)	TC / FAA ACCEPTED (NAME AND DATE)
0	1 through 6	Original Issue	see page 1	see page 1	see page 1	see page 1
						,
	7					
						344
					,	

NOTE: Revisions to this document will be distributed to operators of this equipment by the STC holder.

NOTE: Revised portions of affected pages are identified by a vertical black line in the margin adjacent to the change.

Rev. 0 6 November 2002 TC Accepted NOV 1 9 2002

ICA-ECL-112



TABLE OF CONTENTS

CHAPTER	TITLE	PAGE
A.	DESCRIPTION	4
B.	AIRWORTHINESS LIMITATIONS	4
C.	CONTROL, OPERATION	4
D.	INSPECTION REQUIREMENTS	4
E.	TROUBLESHOOTING	4
F.	OVERHAUL REQUIREMENTS	4
G.	SPECIAL TOOLING	4
H.	REMOVAL	5
1.	INSTALLATION	5
J.	PLACARDS	5
		•

TABLE OF FIGURES

FIGURE	TITIF	
ドルコリドド	1111 =	PAGE
		PAGE

NOV 1 9 2002



A DESCRIPTION

- Installation of the RH & LH side maintenance steps provide a safe stepping surface for personnel working in main rotor head area or main transmission.
- 2. This Maintenance Manual Supplement covers the required maintenance action for the LH & RH Maintenance Steps (P/N 350-200094/104).

B AIRWORTHINESS LIMITATIONS

No Airworthiness Limitations associated with this type design change.

C CONTROL, OPERATION

Not applicable.

D INSPECTION REQUIREMENTS

NO.	INSPECTION OR MAINTENANCE WORK	INTERVAL	REMARKS
1.	Visually inspect modified area for condition	Every 100 flight hours to coincide with the 100 hrs helicopter inspection	- if cracks are found in the cowling and / or step, Repair as required in accordance with Standard Practice Manual (MTC 20.03.07.101)
2.	Visually inspect edge of step cutout for wear and delaminating	Every 100 flight hours to coincide with the 100 hrs helicopter inspection	 if delaminating is found, Repair as required in accordance with Standard Practice Manual (MTC 20.03.07.101)

E TROUBLESHOOTING

Not applicable.

F OVERHAUL REQUIREMENTS

No overhaul requirement for this installation.

G SPECIAL TOOLING

Tools required

: Standard shop tools

H REMOVAL

NOTE:

Due to the LH & RH Maintenance Steps consisting of a cutout in the transmission cowling, maintenance action is limited to inspection for damage.

In the event that any delaminating has occurred in the modified area around the edge of the cutout, the cowling must be removed and repaired in accordance with Standard Practice

Manual (MTC 20.03.07.101).

Rev. 0 6 November 2002 NOV 1 9 2002

ICA-ECL-112



I INSTALLATION

1. For installation of the transmission cowling refer to the EC 130 B4 Maintenance Manual


J PLACARDS

There are no placards required for this installation.

TC Accepted

NOV 1 9 2002



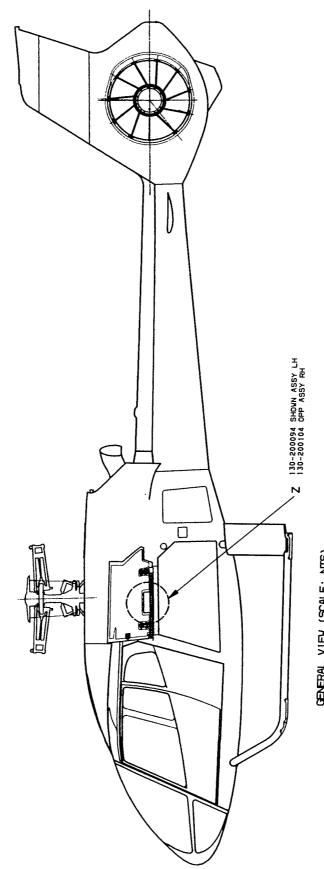

GENERAL VIEW (SCALE: NTS)

TC Accepted NOV 1 9 2002

Rev. 0 6 November 2002

ICA-ECL-112